

SMALL ENGLAND

F9: Guard's whistles

F18: "All aboard, please" (Welsh & English)

F19: "This train will depart in two minutes" (English)

F20: Level crossing warning signal Porthmadog

F0: Light

F1: Engine sound

F6: Coupling on/off
(Only at stand still)

F10: Doors closing

F16: Running sound with bogie coaches

F17: Running sound with goods wagons

F26: Mute

F27: Volume down

F28: Volume up

F15: Filling watertank

F12: Vacuum brake

F0: Whistle high

F3: Whistle short*

F4: Whistle long*

* F24 Off = Prince, On = Welsh Pony

F13: Whistle long (playable)

F14: Whistle long (playable) Welsh Pony

F22: Whistle low-high-high Welsh Pony

F5: Coal shovelling

 
F2: Brake

F8: Open drain cocks

F11: Injector

F7: Shunting speed

F21: Cleaning footplate with water

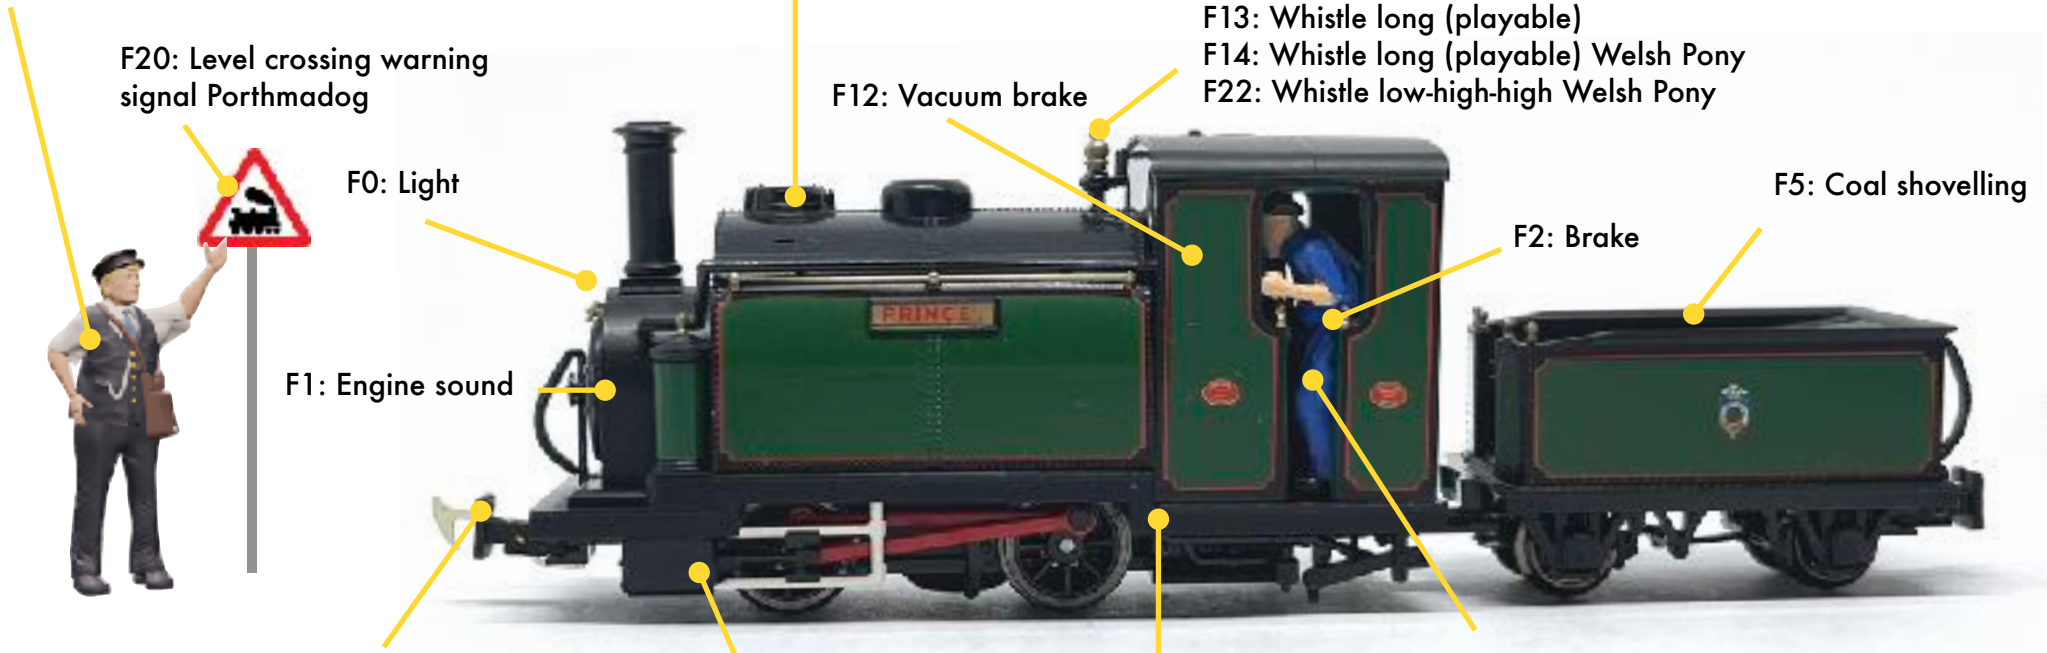

FUNCTION LIST

F0: Whistle high
 F1: SOUND ON/OFF
 F2: Brake key (CV309)
 F3: Whistles (F24 off=Prince, F24 on=Welsh Pony)
 F4: Whistles (F24 off=Prince, F24 on=Welsh Pony)
 F5: Coal shovelling (Output 1 on for smokebox light flicker, when fitted)
 F6: Coupling
 F7: Shunting speed
 F8: Open drain cocks
 F9: Guard's whistles
 F10: Door closing
 F11: Injector
 F12: Vacuum brake
 F13: Whistle long (playable)
 F14: Whistle long (playable) (Welsh Pony)
 F15: Filling Watertank
 F16: Rail rattle sound with bogie coaches
 F17: Rail rattle sound with goods wagons
 F18: "All aboard please" (Welsh)
 F19: "All aboard please" (English)
 F20: "This train will depart in two minutes" (English)
 F21: Cleaning footplate with water
 F22: Whistle low high high (Welsh Pony)
 F23: -
 F24: Whistle change for F3 and F4: Off=Prince
 On=Welsh Pony
 F25: -
 F26: Mute
 F27: Vol- (CV396)
 F28: Vol+ (CV397)

SOUND SLOTS

25	Cylinder	57	"This train will depart in two minutes" (English)
26	Whistle high	58	Whistle-TwoTone Welsh Pony
27	Braking	60	Whistle hold 1(long)
28	Cylinder	61	"All aboard" (Welsh)
29	Couple-uncouple	63	Whistle-lowhighhigh Welsh Pony
30	Cylinder drain	64	Whistle-low-very long Welsh Pony
31	Vacuum_pump	65	Door slam Bowsider
32	Doors_close		
33	Vacuum brake		
34	Cylinder hiss at start		
35	Rail sound		
36	Whistle double		
37	Whistle hold		
38	Whistle short		
39	Whistle medium		
40	Injector		
41	Clean floor		
42	Water filling		
43	Coal shovelling		
44	Braking		
45	Goods wagons rattle		
46	Couple		
47	Uncouple		
48	Whistle-high Welsh Pony		
49	Whistle-high-long Welsh Pony		
50	Guard's whistle long		
51	Guard's whistle short		
52	Guard's whistle double		
53	Braking		
54	Cleaning footplate with water		
55	Brushing		
56	"All aboard please" (English)		

Introduction

Installation

The sound file has to be installed on a Zimo sound decoder. You can not install it on any other brand. To upload the file, you need a Zimo programmer (MXULFA) or a black Z21. With the latter, you use the Z21 Maintenance software (Windows only or through Parallels on a Mac) and use the tab "Decoder update) to upload the file to the decoder. The time it takes depends on the size of the sound file. It can range from 15 minutes to even an hour.

CV settings brake key:

CV 4: 25 Rolling out delay (0-255)

CV 309: 2 Assign F key (1-28)

CV 349: 15 Brake time (0-255)

The functions explained

F2 Brake key

If you are new to the brake key, this could be a life changing experience for you. It was introduced by, as far as I have been able to discover, Soundtraxx in the early 2000's. Normally CV4 is set to decide how long of a roll out you have when turning the speed controller to zero. But with a brake button, CV 4 is set to imitate the train rolling out, when the brakes are not on. Now if you turn the speed controller closer to the zero position, then the train will only come to a faster halt when you press the F2 button, which is a dedicated brake key.

Note that you can run the train again with the brake key on. This way the braking time is limited and in the train will behave as if you were used to when running trains without a brake key. This is especially handy when you hand the speed controller to someone who is not familiar with the brake key and you don't want them to run into another precious model train.

Notes from the designer

The **sound chuff** on this sound file for Zimo decoders has been tuned for the Heljan model. You can adjust the speed of the chuffs in CV 267 if you are using this for another model. The default is 72, tuned for the Kato/Peco Small England model.

The **whistles** at F13 and F14 can be short or long, depending on how long you activate the F key.

A **Departure whistle** is available. To turn on: CV 581 > 26 (sound slot number) for high pitched whistle, 38 for low pitched whistle. To turn off, CV 581 > 0

The **Brake key** is on by default. To turn off: change CV 4 (default 25) to a lower number, like 10. If you want the roll out to be more, increase the value of CV 4 to 110, for example.

The **Coupling** (F6) has been set up so that when you are running the train and activate the button, no sound is played. Only when you come to a full stop to couple up, the coupling sound plays. Leave the button activated until you want to uncouple. The uncoupling sound is only played at a stand still.

The **Random Sounds** will appear once in a while. Follow the instructions in the Zimo manual to change their timing.

Z1: Injector

Z2: Coal shovelling and fire box glow

Z3: Clearing footplate

Because the Kato/Peco model doesn't come with working **light**, F0 has been assigned as a short whistle burst. If you want to disable the sound, set CV 570 to value 0. If you want to enable it again, assign value 26 (sound slot) again to the same CV. Or assign any other sound if you wish.

When coming to a halt, the **Vacuum brake** is activated. If you prefer to turn this off, set CV 990 to 0 (change of volume).

Any feedback or correction to the sound file or this document are welcomed at info@tramfabriek.co.uk .

Sound file design by Sven van der Hart